

Console

Overview

The console is used for accessing the MikroTik Router's configuration and management features using text terminals, either remotely using serial port, telnet, SSH or console screen within Winbox, or directly using monitor and keyboard. The console is also used for writing scripts. This manual describes the general console operation principles. Please consult the Scripting Manual on some advanced console commands and on how to write scripts.

Hierarchy

The console allows the configuration of the router's settings using text commands. Since there is a lot of available commands, they are split into groups organized in a way of hierarchical menu levels. The name of a menu level reflects the configuration information accessible in the relevant section, eg. **/ip hotspot**.

Example

For example, you can issue the **/ip route print** command:

```
[admin@MikroTik] > ip route print
Flags: X - disabled, A - active, D - dynamic,
C - connect, S - static, r - rip, b - bgp, o - ospf, m - mme,
B - blackhole, U - unreachable, P - prohibit
# DST-ADDRESS PREF-SRC G GATEWAY DIS INTE...
0 A S 0.0.0.0/0 r 10.0.3.1 1 bridgel
1 ADC 1.0.1.0/24 1.0.1.1 0 bridgel
2 ADC 1.0.2.0/24 1.0.2.1 0 ether3
3 ADC 10.0.3.0/24 10.0.3.144 0 bridgel
4 ADC 10.10.10.0/24 10.10.10.1 0 wlanl
[admin@MikroTik] >
```

Instead of typing **/ip route** path before each command, the path can be typed only once to move into this particular branch of menu hierarchy. Thus, the example above could also be executed like this:

```
[admin@MikroTik] > ip route
[admin@MikroTik] ip route> print
Flags: X - disabled, A - active, D - dynamic,
C - connect, S - static, r - rip, b - bgp, o - ospf, m - mme,
B - blackhole, U - unreachable, P - prohibit #
DST-ADDRESS PREF-SRC G GATEWAY DIS INTE...
0 A S 0.0.0.0/0 r 10.0.3.1 1 bridgel
1 ADC 1.0.1.0/24 1.0.1.1 0 bridgel
2 ADC 1.0.2.0/24 1.0.2.1 0 ether3
3 ADC 10.0.3.0/24 10.0.3.144 0 bridgel
4 ADC 10.10.10.0/24 10.10.10.1 0 wlanl [
admin@MikroTik] ip route>
```

Notice that the prompt changes in order to reflect where you are located in the menu hierarchy at the moment. To move to the top level again, type **/"**

```
[admin@MikroTik] > ip route
[admin@MikroTik] ip route> /
[admin@MikroTik] >
```

To move up one command level, type **".."**

```
[admin@MikroTik] ip route> ..
[admin@MikroTik] ip>
```

You can also use **/** and **..** to execute commands from other menu levels without changing the current level:

```
[admin@MikroTik] ip route> /ping 10.0.0.1
10.0.0.1 ping timeout
2 packets transmitted, 0 packets received, 100% packet loss
[admin@MikroTik] ip firewall nat> .. service-port print
Flags: X - disabled, I - invalid
# NAME PORTS
0 ftp 21
1 tftp 69
2 irc 6667
3 h323
4 sip
5 pptp
[admin@MikroTik] ip firewall nat>
```

Item Names and Numbers

Many of the command levels operate with arrays of items: interfaces, routes, users, etc. Such arrays are displayed in similarly looking lists. All items in the list have an item number followed by flags and parameter values.

To change properties of an item, you have to use **set** command and specify name or number of the item.

Item Names

Some lists have items with specific names assigned to each of them. Examples are **interface** or **user** levels. There you can use item names instead of item numbers.

You do not have to use the **print** command before accessing items by their names, which, as opposed to numbers, are not assigned by the console internally, but are properties of the items. Thus, they would not change on their own. However, there are all kinds of obscure situations possible when several users are changing router's configuration at the same time. Generally, item names are more "stable" than the numbers, and also more informative, so you should prefer them to numbers when writing console scripts.

Item Numbers

Item numbers are assigned by the print command and are not constant - it is possible that two successive print commands will order items differently. But the results of last print commands are memorized and, thus, once assigned, item numbers can be used even after **add**, **remove** and **move** operations (since version 3, **move** operation does not renumber items). Item numbers are assigned on a per session basis, they will remain the same until you quit the console or until the next print command is executed. Also, numbers are assigned separately for every item list, so the **ip address print** will not change the numbering of the interface list.

Since version 3 it is possible to use item numbers without running **print** command. Numbers will be assigned just as if the **print** command was executed.

You can specify multiple items as targets to some commands. Almost everywhere, where you can write the number of item, you can also write a list of numbers.

```
[admin@MikroTik] > interface print
Flags: X - disabled, D - dynamic, R - running
# NAME TYPE MTU
0 R ether1 ether 1500
1 R ether2 ether 1500
2 R ether3 ether 1500
3 R ether4 ether 1500
[admin@MikroTik] > interface set 0,1,2 mtu=1460
[admin@MikroTik] > interface print
Flags: X - disabled, D - dynamic, R - running
# NAME TYPE MTU
0 R ether1 ether 1460
1 R ether2 ether 1460
2 R ether3 ether 1460
3 R ether4 ether 1500
[admin@MikroTik] >
```

Warning: Do not use Item numbers in scripts, it is not a reliable way to edit items in the **scheduler**, **scripts**, etc. Instead use find command. More info [here](#) al so look at [scripting examples](#).

Quick Typing

There are two features in the console that help entering commands much quicker and easier - the [Tab] key completions, and abbreviations of command names. Completions work similarly to the bash shell in UNIX. If you press the [Tab] key after a part of a word, the console tries to find the command within the current context that begins with this word. If there is only one match, it is automatically appended, followed by a space:

```
/inte[Tab]_ becomes /interface _
```

If there is more than one match, but they all have a common beginning, which is longer than that what you have typed, then the word is completed to this common part, and no space is appended:

```
/interface set e[Tab]_ becomes /interface set ether_
```

If you've typed just the common part, pressing the tab key once has no effect. However, pressing it for the second time shows all possible completions in compact form:

```
[admin@MikroTik] > interface set e[Tab]_
[admin@MikroTik] > interface set ether[Tab]_
[admin@MikroTik] > interface set ether[Tab]_
ether1 ether5
[admin@MikroTik] > interface set ether_
```

The **[Tab]** key can be used almost in any context where the console might have a clue about possible values - command names, argument names, arguments that have only several possible values (like names of items in some lists or name of protocol in firewall and NAT rules). You cannot complete numbers, IP addresses and similar values.

Another way to press fewer keys while typing is to abbreviate command and argument names. You can type only beginning of command name, and, if it is not ambiguous, console will accept it as a full name. So typing:

```
[admin@MikroTik] > pi 10.1 c 3 si 100
```

equals to:

```
[admin@MikroTik] > ping 10.0.0.1 count 3 size 100
```

It is possible to complete not only the beginning, but also any distinctive substring of a name: if there is no exact match, the console starts looking for words that have string being completed as first letters of a multiple word name, or that simply contain letters of this string in the same order. If single such word is found, it is completed at cursor position. For example:

```
[admin@MikroTik] > interface x[TAB]_
[admin@MikroTik] > interface export _

[admin@MikroTik] > interface mt[TAB]_
[admin@MikroTik] > interface monitor-traffic _
```

General Commands

There are some commands that are common to nearly all menu levels, namely: **print**, **set**, **remove**, **add**, **find**, **get**, **export**, **enable**, **disable**, **comment**, **move**. These commands have similar behavior throughout different menu levels.

- **add** - this command usually has all the same arguments as **set**, except the item number argument. It adds a new item with the values you have specified, usually at the end of the item list, in places where the order of items is relevant. There are some required properties that you have to supply, such as the interface for a new address, while other properties are set to defaults unless you explicitly specify them.
 - Common Parameters

cursor and move cursor back one position. Control-\ split line at cursor. Insert newline at cursor position. Display second of the two resulting lines. Control-B or Left move cursor backwards one character. Control-F or Right move cursor forward one character. Control-P or Up go to previous line. If this is the first line of input then recall previous input from history. Control-N or Down go to next line. If this is the last line of input then recall next input from history. Control-A or Home move cursor to the beginning of the line. If cursor is already at the beginning of the line, then go to the beginning of the first line of current input. Control-E or End move cursor to the end of line. If cursor is already at the end of line, then move it to the end of the last line of current input. Control-L or F5 reset terminal and repaint screen.

up, **down** and **split** keys leave cursor at the end of line.

Built-in Help


The console has a built-in help, which can be accessed by typing **?**. The general rule is that help shows what you can type in a position where the **?** was pressed (similarly to pressing **[Tab]** key twice, but in verbose form and with explanations).

Safe Mode

It is sometimes possible to change router configuration in a way that will make the router inaccessible (except from local console). Usually this is done by accident, but there is no way to undo last change when connection to router is already cut. Safe mode can be used to minimize such risk.

Safe mode is entered by pressing **[CTRL]+[X]**. To save changes and quit safe mode, press **[CTRL]+[X]** again. To exit without saving the made changes, hit **[CTRL]+[D]**

```
[admin@MikroTik] ip route>[CTRL]+[X]
[Safe Mode taken]
[admin@MikroTik] ip route<SAFE>
```

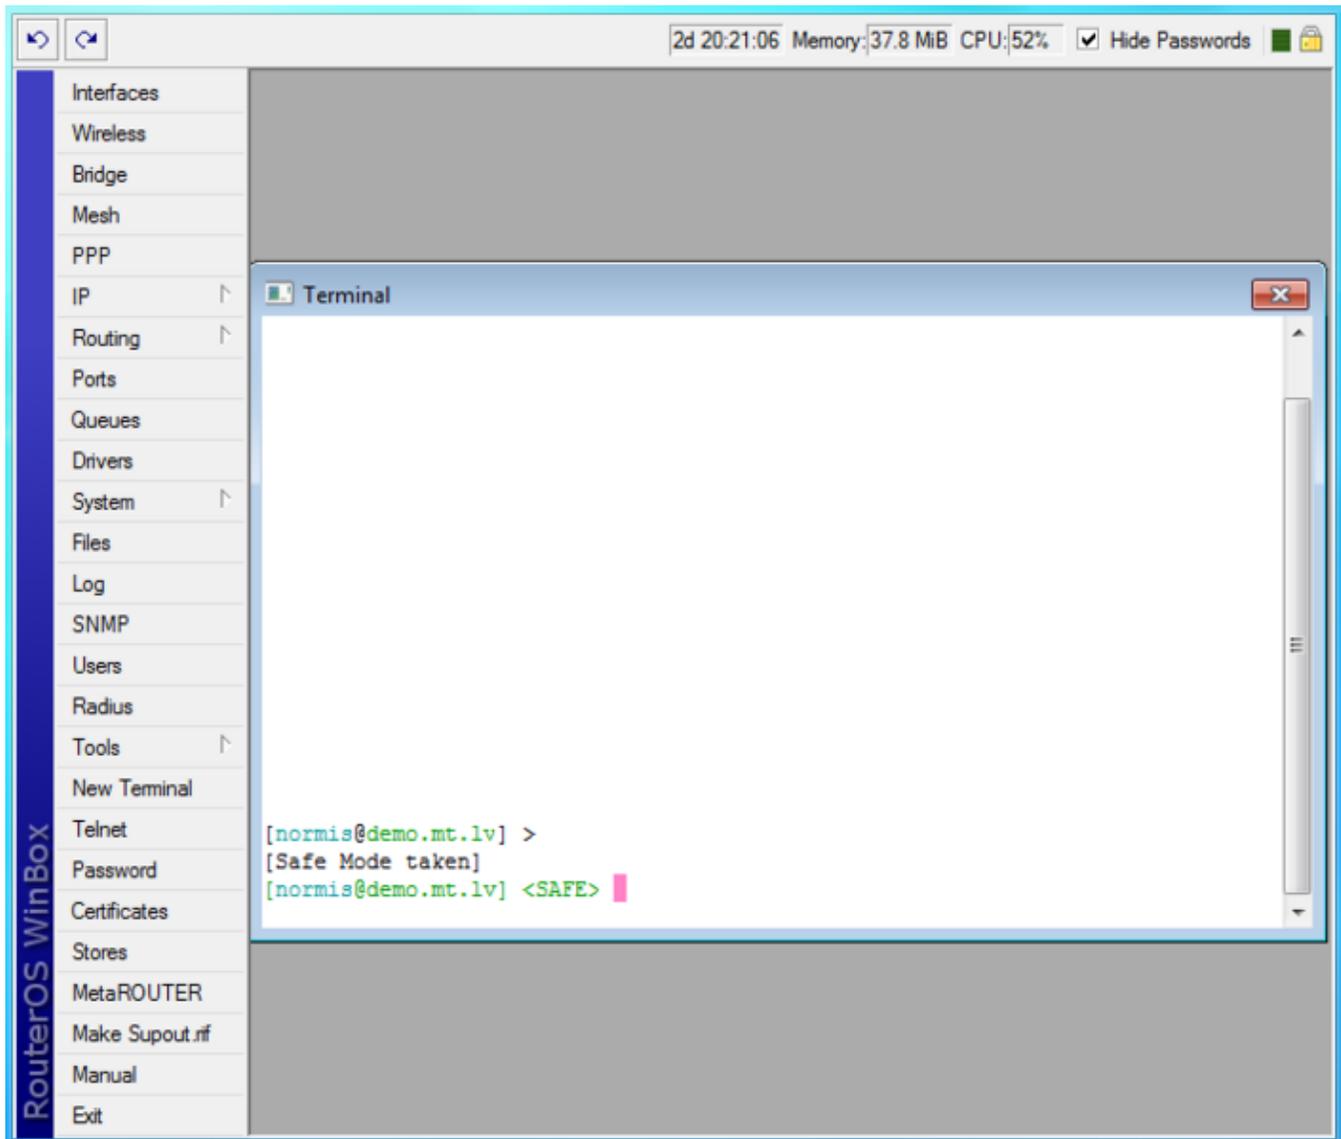

Message **Safe Mode taken** is displayed and prompt changes to reflect that session is now in safe mode. All configuration changes that are made (also from other login sessions), while router is in safe mode, are automatically undone if safe mode session terminates abnormally. You can see all such changes that will be automatically undone tagged with an **F** flag in system history:

```
[admin@MikroTik] ip route>
[Safe Mode taken]
[admin@MikroTik] ip route<SAFE> add
[admin@MikroTik] ip route<SAFE> /system history print
Flags: U - undoable, R - redoable, F - floating-undo
ACTION BY POLICY
F route added admin write
```

Now, if telnet connection (or winbox terminal) is cut, then after a while (TCP timeout is **9** minutes) all changes that were made while in safe mode will be undone. Exiting session by **[Ctrl]+[D]** also undoes all safe mode changes, while **/quit** does not.

If another user tries to enter safe mode, he's given following message:

```
[admin@MikroTik] >
Hijacking Safe Mode from someone - unroll/release/don't take it [u/r/d]:
```

- [u] - undoes all safe mode changes, and puts the current session in safe mode.
- [r] - keeps all current safe mode changes, and puts current session in a safe mode. The previous owner of safe mode is notified about this:

```
[admin@MikroTik] ip firewall rule input  
[Safe mode released by another user]
```

- [d] - leaves everything as-is.

If too many changes are made while in safe mode, and there's no room in history to hold them all (currently history keeps up to 100 most recent actions), then session is automatically put out of the safe mode, no changes are automatically undone. Thus, it is best to change configuration in small steps, while in safe mode. Pressing [Ctrl]+[X] twice is an easy way to empty safe mode action list.

HotLock Mode

When HotLock mode is enabled commands will be auto-completed.

To enter/exit HotLock mode press **[CTRL]+[V]**.

```
[admin@MikroTik] /ip address> [CTRL]+[V]  
[admin@MikroTik] /ip address>>
```

Double>> is an indication that HotLock mode is enabled. For example, if you type `/in e`, it will be auto-completed to

```
[admin@MikroTik] /ip address>> /interface ethernet
```

Quick Help menu

F6 key enables a menu at the bottom of the terminal which shows common key combinations and their usage.

```
[admin@RB493G] >  
tab compl ? F1 help ^V hotlk ^X safe ^C brk ^D quit
```