

WifiWave2

The wifivave2 package offers a new wireless driver, supporting 802.11ac Wave 2 features and an alternative configuration menu.

It can be downloaded as part of the ['Extra Packages' archive](#) for the latest ARM release of RouterOS 7.



Installing the wifivave2 package disables other means of configuring wireless interfaces.

Before installation, make sure to back up any wireless and CAPsMAN configuration you may want to retain.

- [Requirements](#)
- [Features](#)
- [Interface configuration](#)
 - [AAA properties](#)
 - [Channel properties](#)
 - [Configuration properties](#)
 - [Security properties](#)
 - [Miscellaneous properties](#)
 - [Read-only properties](#)
 - [Configuration profiles](#)
 - [Interface configuration examples](#)
 - [Basic password-protected AP](#)
 - [Open AP with OWE transition mode](#)
 - [Advanced examples](#)
 - [Resetting configuration](#)
- [Access List](#)
 - [MAC address authentication](#)
 - [Access rule examples](#)
- [Frequency scan](#)
- [Scan command](#)
- [WPS](#)
 - [WPS server](#)
 - [WPS client](#)
- [Radios](#)
- [Registration table](#)
 - [De-authentication](#)
- [Regulatory domain information](#)

Requirements

The wifivave2 package is compatible with IPQ4019 and QCA9984 wireless interfaces and is only available for ARM builds of RouterOS v7. It also requires 14MB of free space and at least 256MB of RAM.

As of the release of RouterOS 7.1, this means it is compatible with 4 devices:

1. hAP ac³ (non-LTE)
2. Audience*
3. Audience LTE6 kit*
4. RB4011iGS+5HacQ2HnD**



* The wifivave2 package is not compatible with CAPsMAN. And does not yet offer wireless meshing (4-address mode).

** The 2.4GHz wireless interface on the RB4011iGS+5HacQ2HnD is not compatible with the wifivave2 package. It will not be usable with the package installed.

Features

- WPA3 authentication and OWE (opportunistic wireless encryption)
- 802.11w standard management frame protection
- MU-MIMO and beamforming
- 400Mb/s maximum data rate in the 2.4GHz band for IPQ4019 interfaces

Interface configuration

When using a graphical configuration tool (WinBox or WebFig), wifivave2 interfaces can be configured using either the 'Wireless' or 'QuickSet' tabs.

When using a CLI, wifivave2 interfaces can be configured in the '/interface/wifivave2' menu.

AAA properties

Properties in this category configure an access point's interaction with AAA (RADIUS) servers.

Certain parameters in the table below take *format-string* as their value. In a *format-string*, certain characters are interpreted in the following way:

Character	Interpretation
a	Hexadecimal character making up the MAC address of the client device in lower case
A	Hexadecimal character making up the MAC address of the client device in upper case
i	Hexadecimal character making up the MAC address of the AP's interface in lower case
I (capital 'i')	Hexadecimal character making up the MAC address of the AP's interface in upper case
N	The entire name of the AP's interface (e.g. 'wifi1')
S	The entire SSID

All other characters are used without interpreting them in any way. For examples, see default values.

Property	Description
called-format (<i>format-string</i>)	Format for the value of the Called-Station-Id RADIUS attribute, in AP's messages to RADIUS servers. Default: II-II-II-II-II: S
calling-format (<i>format-string</i>)	Format for the value of the Calling-Station-Id RADIUS attribute, in AP's messages to RADIUS servers. Default: AA-AA-AA-AA-AA-AA
interim-update (<i>time interval</i>)	Interval at which to send interim updates about traffic accounting to the RADIUS server. Default: 5m
mac-caching (<i>time interval</i> <i>'disabled'</i>)	Length of time to cache RADIUS server replies, when MAC address authentication is enabled. This resolves issues with client device authentication timing out due to (comparatively high latency of RADIUS server replies. Default value: disabled.
name (<i>string</i>)	A unique name for the AAA profile. No default value.
nas-identifier (<i>string</i>)	Value of the NAS-Identifier attribute, in AP's messages to RADIUS servers. Defaults to the host name of the device (/system/identity).
password-format (<i>format-string</i>)	Format for value to use in calculating the value of the User-Password attribute in AP's messages to RADIUS servers when performing MAC address authentication. Default value: "" (an empty string).
username-format (<i>format-string</i>)	Format for the value of the User-Name attribute in AP's messages to RADIUS servers when performing MAC address authentication. Default value : AA : AA : AA : AA : AA : AA

Channel properties

Properties in this category specify the desired radio channel.

Property	Description
band (<i>2ghz-g 2ghz-n 2ghz-ax 5ghz-a 5ghz-ac 5ghz-an 5ghz-ax</i>)	Supported frequency band and wireless standard. Defaults to newest supported standard. Note that band support is limited by radio capabilities.
frequency (<i>list of integers or integer ranges</i>)	For an interface in AP mode, specifies frequencies (in MHz) to consider when picking control channel center frequency. For an interface in station mode, specifies frequencies on which to scan for APs. Leave unset (default) to consider all frequencies supported by the radio and permitted by the applicable regulatory profile. The parameter can contain 1 or more comma-separated values of integers or, optionally, ranges of integers denoted using the syntax RangeBeginning-RangeEnd:RangeStep Examples of valid channel.frequency values: <ul style="list-style-type: none">• 2412• 2412,2432,2472• 5180-5240:20,5500-5580:20
secondary-frequency (<i>list of integers 'disabled'</i>)	Frequency (in MHz) to use for the center of the secondary part of a split 80+80MHz channel. Only official 80MHz channels (5210, 5290, 5530, 5610, 5690, 5775) are supported. Leave unset (default) for automatic selection of secondary channel frequency.
skip-dfs-channels (<i>10min-cac all disabled</i>)	Whether to avoid using channels, on which channel availability check (listening for presence of radar signals) is required. <ul style="list-style-type: none">• <i>10min-cac</i> - interface will avoid using channels, on which 10 minute long CAC is required• <i>all</i> - interface will avoid using all channels, on which CAC is required• <i>disabled</i> (default) - interface may select any supported channel, regardless of CAC requirements
width (<i>20mhz 20/40mhz 20/40mhz-Ce 20/40mhz-eC 20/40/80mhz 20/40/80+80mhz 20/40/80/160mhz</i>)	Width of radio channel. Defaults to widest channel supported by the radio hardware.

Configuration properties


This section includes properties relating to the operation of the interface and the associated radio.

Property	Description
chains (<i>list of integer 0..7</i>)	Radio chains to use for receiving signals. Defaults to all chains available to the corresponding radio hardware.
country (<i>name of a country</i>)	Determines, which regulatory domain restrictions are applied to an interface. Defaults to "United States". Note: It is important to set this value correctly to comply with local regulations and ensure interoperability with other devices.
hide-ssid (<i>no yes</i>)	<ul style="list-style-type: none">• <i>yes</i> - AP does not include its SSID in beacon frames, and does not reply to probe requests that have broadcast SSID.• <i>no</i> - AP includes its SSID in the beacon frames, and replies to probe requests that have broadcast SSID. Default: no

mode (<i>ap station</i>)	Interface operation mode <ul style="list-style-type: none"> • <i>ap</i> (default) - interface operates as an access point • <i>station</i> - interface acts as a client device, scanning for access points advertising the configured SSID
ssid (<i>string</i>)	The name of the wireless network, aka the (E)SSID. No default value.
tx-chains (<i>list of integer 0..7</i>)	Radio chains to use for transmitting signals. Defaults to all chains available to the corresponding radio hardware.
tx-power (<i>integer 0..40</i>)	A limit on the transmit power (in dBm) of the interface. Can not be used to set power above limits imposed by the regulatory profile. Unset by default.

Security properties

Parameters relating to authentication.

Property	Description
authentication-types (<i>list of wpa-psk, wpa2-psk, wpa-eap, wpa2-eap, wpa3-psk, owe, wpa3-eap, wpa3-eap-192</i>)	<p>Authentication types to enable on the interface.</p> <p>The default value is an empty list (no authentication, an open network).</p> <p>Configuring a passphrase, adds to the default list the <i>wpa2-psk</i> authentication method (if the interface is an AP) or both <i>wpa-psk</i> and <i>wpa2-psk</i> (if the interface is a station).</p> <p>Configuring an <i>eap-username</i> and an <i>eap-password</i> adds to the default list <i>wpa-eap</i> and <i>wpa2-eap</i> authentication methods.</p>
dh-groups (<i>list of 19, 20, 21</i>)	Identifiers of elliptic curve cryptography groups to use in SAE (WPA3) authentication.
disable-pmkid (<i>no yes</i>)	<p>For interfaces in AP mode, disables inclusion of a PMKID in EAPOL frames. Disabling PMKID can cause compatibility issues with client devices which make use of it.</p> <ul style="list-style-type: none"> • <i>yes</i> - Do not include PMKID in EAPOL frames. • <i>no</i> (default) - include PMKID in EAPOL frames.
eap-accounting (<i>no yes</i>)	Send accounting information to RADIUS server for EAP-authenticated peers. Default: no.
 Properties related to EAP, are only relevant to interfaces in station mode. APs delegate EAP authentication to the RADIUS server.	
eap-anonymous-identity (<i>string</i>)	Optional anonymous identity for EAP outer authentication. No default value.
eap-certificate-mode (<i>dont-verify-certificate no-certificates verify-certificate verify-certificate-with-crl</i>)	<p>Policy for handling the TLS certificate of the RADIUS server.</p> <ul style="list-style-type: none"> • <i>verify-certificate</i> - require server to have a valid certificate. Check that it is signed by a trusted certificate authority. • <i>dont-verify-certificate</i> (default) - Do not perform any checks on the certificate. • <i>no-certificates</i> - Attempt to establish the TLS tunnel by performing anonymous Diffie-Hellman key exchange. To be used if the RADIUS server has no certificate at all. • <i>verify-certificate-with-crl</i> - Same as <i>verify-certificate</i>, but also checks if the certificate is valid by checking the Certificate Revocation List.
eap-methods (<i>list of peap, tls, ttls</i>)	EAP methods to consider for authentication. Defaults to all supported methods.
eap-password (<i>string</i>)	Password to use, when the chosen EAP method requires one. No default value.
eap-tls-certificate (<i>certificate</i>)	Name or id of a certificate in the device's certificate store to use, when the chosen EAP authentication method requires one. No default value.
eap-username (<i>string</i>)	Username to use when the chosen EAP method requires one. No default value.



Take care when configuring encryption ciphers.

All client devices MUST support the group encryption cipher used by the AP to connect, and some client devices (notably, Intel® 8260) will also fail to connect if the list of unicast ciphers includes any they don't support.

encryption (<i>list of ccmp, ccmp-256, gcmp, gcmp-256, tkip</i>)	A list of ciphers to support for encrypting unicast traffic. Defaults to <i>ccmp</i> .
group-encryption(<i>ccmp ccmp-256 gcmp gcmp-256 tkip</i>)	Cipher to use for encrypting multicast traffic. Defaults to <i>ccmp</i> .
group-key-update (<i>time interval 30s.. 1h</i>)	Interval at which the group temporal key (key for encrypting broadcast traffic) is renewed. Defaults to 5 minutes.
management-encryption (<i>cmac cmac-256 gmac gmac-256</i>)	Cipher to use for encrypting protected management frames. Defaults to <i>cmac</i> .
management-protection (<i>allowed disabled required</i>)	Whether to use 802.11w management frame protection. Incompatible with management frame protection in standard wireless package. Default value depends on value of selected authentication type (WPA (1) does not support MFP, while WPA3 requires it).
owe-transition-interface (<i>interface</i>)	Name or internal id of an interface whose MAC address and SSID to advertise as the matching AP when running in OWE transition mode. Required for setting up open APs that offer OWE, but also work with older devices that don't support the standard. See configuration example below .
passphrase (<i>string of up to 63 characters</i>)	Passphrase to use for PSK authentication types. Defaults to an empty string - "". WPA-PSK and WPA2-PSK authentication requires a minimum of 8 chars, while WPA3-PSK does not have minimum passphrase length.
sae-anti-clogging-threshold (<i>'disabled' integer</i>)	Due to SAE (WPA3) associations being CPU resource intensive, overwhelming an AP with bogus authentication requests makes for a feasible denial-of-service attack. This parameter provides a way to mitigate such attacks by specifying a threshold of in-progress SAE authentications, at which the AP will start requesting that client devices include a cookie bound to their MAC address in their authentication requests. It will then only process authentication requests which contain valid cookies. Default: <i>disabled</i> .
sae-max-failure-rate (<i>'disabled' integer</i>)	Rate of failed SAE (WPA3) associations per minute, at which the AP will stop processing new association requests. Defaults to <i>disabled</i> .
wps (<i>disabled push-button</i>)	<ul style="list-style-type: none"> <i>push-button</i> (default) - AP will accept WPS authentication for 2 minutes after 'wps-push-button' command is called. Physical WPS button functionality not yet implemented. <i>disabled</i> - AP will not accept WPS authentication

Miscellaneous properties

Property	Description
----------	-------------

arp (<i>disabled enabled local-proxy-arp proxy-arp reply-only</i>)	<p>Address Resolution Protocol mode:</p> <ul style="list-style-type: none"> • <i>disabled</i> - the interface will not use ARP • <i>enabled</i> - the interface will use ARP (default) • <i>local-proxy-arp</i> - the router performs proxy ARP on the interface and sends replies to the same interface • <i>proxy-arp</i> - the router performs proxy ARP on the interface and sends replies to other interfaces • <i>reply-only</i> - the interface will only reply to requests originated from matching IP address/MAC address combinations which are entered as static entries in the ARP table. No dynamic entries will be automatically stored in the ARP table. Therefore for communications to be successful, a valid static entry must already exist.
arp-timeout (<i>time interval 'auto'</i>)	<p>Determines how long a dynamically added ARP table entry is considered valid since the last packet was received from the respective IP address.</p> <p>Value <i>auto</i> equals to the value of <i>arp-timeout</i> in <i>/ip settings</i>, which defaults to 30s.</p>
disable-running-check (<i>no yes</i>)	<ul style="list-style-type: none"> • <i>yes</i> - interface's <i>running</i> property will be true whenever the interface is not disabled • <i>no</i> (default) - interface's <i>running</i> property will only be true when it has established a link to another device
disabled (<i>no yes</i>) (X)	Hardware interfaces are disabled by default. Virtual interfaces are not.
mac-address (<i>MAC</i>)	<p>MAC address (BSSID) to use for an interface.</p> <p>Hardware interfaces default to the MAC address of the associated radio interface.</p> <p>Default MAC addresses for virtual interfaces are generated by</p> <ol style="list-style-type: none"> 1. Taking the MAC address of the associated master interface 2. Setting the second-least-significant bit of the first octet to 1, resulting in a locally administered MAC address 3. If needed, incrementing the last octet of the address to ensure it doesn't overlap with the address of another interface on the device
master-interface (<i>interface</i>)	<p>Multiple interface configurations can be run simultaneously on every wireless radio.</p> <p>Only one of them determines the radio's state (whether it is enabled, what frequency it's using, etc). This 'master' interface, is <i>bound</i> to a radio with the corresponding <i>radio-mac</i>.</p> <p>To create additional ('virtual') interface configurations on a radio, they need to be <i>bound</i> to the corresponding master interface.</p> <p>No default value.</p>
name (<i>string</i>)	A name for the interface. Defaults to <i>wifiN</i> , where <i>N</i> is the lowest integer that has not yet been used for naming an interface.

Read-only properties

Property	Description
bound (<i>boolean</i>) (B)	<p>Always true for <i>master</i> interfaces (configurations linked to radio hardware).</p> <p>True for a virtual interface (configurations linked to a master interface) when both the interface itself and its master interface are not disabled.</p>
default-name (<i>string</i>)	The default name for an interface.
inactive (<i>boolean</i>) (I)	<p>False for interfaces in AP mode when they've selected a channel for operation (i.e. configuration has been successfully applied).</p> <p>False for interfaces in station mode when they've connected to an AP (i.e. configuration has been successfully applied, and with AP with matching settings has been found).</p> <p>True otherwise.</p>
master (<i>boolean</i>) (M)	True for interface configurations, which are <i>bound</i> to radio hardware. False for virtual interfaces.
radio-mac (<i>MAC</i>)	The MAC address of the associated radio.

running (<i>boolean</i>) (R)	True, when an interface has established a link to another device. If <i>disable-running-check</i> is set to 'yes', true whenever the interface is not disabled.
--------------------------------	--

Configuration profiles

Configuration settings for wifiwave2 interfaces can be grouped in profiles according to the parameter sections listed above. These profiles - **aaa**, **channel**, **configuration** and **security**, can then be assigned to interfaces. **Configuration** profiles can include other profiles as well as separate parameters from other categories.

This optional flexibility is meant to allow each user to arrange their configuration in a way that makes the most sense for them, but it also means that each parameter may have different values assigned to it in different sections of the configuration.

The following priority determines, which value is used:

1. Value in interface settings
2. Value in profile assigned to interface
3. Value in configuration profile assigned to interface
4. Value in profile assigned to configuration profile (which in turn is assigned to interface).

If you are at any point unsure of which parameter value will be used for an interface, consult the **actual-configuration** menu. For an example of configuration profile usage, see following example.

Example for dual-band home AP

```
# Creating a security profile, which will be common for both interfaces
/interface wifiwave2 security
add name=common-auth authentication-types=wpa2-psk,wpa3-psk passphrase="diceware makes good passwords"
wps=disable
# Creating a common configuration profile and linking the security profile to it
/interface wifiwave2 configuration
add name=common-conf ssid=MikroTik country=Latvia security=common-auth
# Creating separate channel configurations for each band
/interface wifiwave2 channel
add name=ch-2ghz frequency=2412,2432,2472 width=20mhz
add name=ch-5ghz frequency=5180,5260,5500 width=20/40/80mhz
# Assigning to each interface the common profile as well as band-specific channel profile
/interface wifiwave2
set wifi1 channel=ch-2ghz configuration=common-conf disabled=no
set wifi2 channel=ch-5ghz configuration=common-conf disabled=no

/interface/wifiwave2/actual-configuration print
0 name="wifi1" mac-address=74:4D:28:94:22:9A arp-timeout=auto radio-mac=74:4D:28:94:22:9A
configuration.ssid="MikroTik" .country=Latvia
security.authentication-types=wpa2-psk,wpa3-psk .passphrase="diceware makes good passwords" .wps=disable
channel.frequency=2412,2432,2472 .width=20mhz

1 name="wifi2" mac-address=74:4D:28:94:22:9B arp-timeout=auto radio-mac=74:4D:28:94:22:9B
configuration.ssid="MikroTik" .country=Latvia
security.authentication-types=wpa2-psk,wpa3-psk .passphrase="diceware makes good passwords" .wps=disable
channel.frequency=5180,5260,5500 .width=20/40/80mhz
```

Interface configuration examples

Basic password-protected AP

```
/interface/wifiwave2
set wifi1 disabled=no configuration.ssid=MikroTik security.authentication-types=wpa2-psk,wpa3-psk security.
passphrase=8-63_characters
```

Open AP with OWE transition mode

Opportunistic wireless encryption (OWE) allows creation of wireless networks that do not require the knowledge of a password to connect, but still offer the benefits of traffic encryption and management frame protection. It is an improvement on regular open access points.

However, since a network cannot be simultaneously encrypted and unencrypted, 2 separate interface configurations are required to offer connectivity to older devices that do not support OWE and offer the benefits of OWE to devices that do.

This configuration is referred to as OWE transition mode.

```
/interface/wifiwave2
add master-interface=wifil name=wifil_owe configuration.ssid=MikroTik_OWE security.authentication-types=owe
security.owe-transition-interface=wifil configuration.hide-ssid=yes
set wifil configuration.ssid=MikroTik security.authentication-types="" security.owe-transition-
interface=wifil_owe
enable wifil,wifil_owe
```

Client devices that support OWE will prefer the OWE interface. If you don't see any devices in your registration table that are associating with the regular open AP, you may want to move on from running a transition mode setup to a single OWE-encrypted interface.

Advanced examples

[Enterprise wireless security with User Manager v5](#)

Assigning VLAN tags to wireless traffic can be achieved by following the [generic bridge VLAN example here](#).

Resetting configuration

Wifiwave2 interface configurations can be reset by using the 'reset' command.

```
/interface/wifiwave2 reset wifil
```

Access List

Access list provides multiple ways of filtering and managing wireless connections.

RouterOS will check each new connection to see if its parameters match parameters specified in any access list rule.

The rules are checked in the order they appear in the list. Only management actions specified in the first matching rule are applied to each connection.

Connections, which have been accepted by an access list rule, will be periodically checked, to see if they remain within the permitted **time** and **signal-range**. If they do not, they will be terminated.



Take care when writing access list rules which reject clients. After being repeatedly rejected by an AP, a client device may start avoiding it.

Filtering parameters	
Parameter	Description
interface (<i>interface</i> <i>interfac</i> <i>e-list</i> <i>any</i>)	Match if connection takes place on the specified interface or interface belonging to specified list. Default: any.
mac-address (<i>MAC address</i>)	Match if the client device has the specified MAC address. No default value.
mac-address-mask (<i>MAC</i> <i>address</i>)	Modifies the mac-address parameter to match if it is equal to the result of performing bit-wise AND operation on the client MAC address and the given address mask. Default: FF:FF:FF:FF:FF:FF (i.e. client's MAC address must match value of mac-address exactly)
signal-range (<i>min..max</i>)	Match if the strength of received signal from the client device is within the given range. Default: '-120..120'

ssid-regexp (<i>regex</i>)	Match if the given regular expression matches the SSID.
time (<i>start-end,days</i>)	Match during the specified time of day and (optionally) days of week. Default: 0s-1d

Action parameters	
Parameter	Description
allow-signal-out-of-range (<i>time period</i> 'always')	The length of time which a connected peer's signal strength is allowed to be outside the range required by the signal-range parameter, before it is disconnected. If the value is set to 'always', peer signal strength is only checked during association. Default: 0s.
action (<i>accept</i> <i>reject</i> <i>query-radius</i>)	Whether to authorize a connection <ul style="list-style-type: none"> <i>accept</i> - connection is allowed <i>reject</i> - connection is not allowed <i>query-radius</i> - connection is allowed if MAC address authentication of the client's MAC address succeeds Default: <i>accept</i>
passphrase (<i>string</i>)	Override the default passphrase with given value. No default value.
radius-accounting (<i>no</i> <i>yes</i>)	Override the default RADIUS accounting policy with given value. No default value.

MAC address authentication

Implemented through the **query-radius** action, MAC address authentication is a way to implement a centralized whitelist of client MAC addresses using a RADIUS server.

When a client device tries to associate with an AP, which is configured to perform MAC address authentication, the AP will send an access-request message to a RADIUS server with the device's MAC address as the user name and an empty password. If the RADIUS server answers with access-accept to such a request, the AP proceeds with whatever regular authentication procedure (passphrase or EAP authentication) is configured for the interface.

Access rule examples

Only accept connections to guest network from nearby devices during business hours

```
/interface/wifiwave2/access-list/print detail
Flags: X - disabled
 0  signal-range=-60..0 allow-signal-out-of-range=5m ssid-regexp="MikroTik Guest" time=7h-19h,mon,tue,wed,thu,
    fri action=accept
 1  ssid-regexp="MikroTik Guest" action=reject
```

Reject connections from locally-administered ('anonymous'/'randomized') MAC addresses

```
/interface/wifiwave2/access-list/print detail
Flags: X - disabled
 0  mac-address=02:00:00:00:00:00 mac-address-mask=02:00:00:00:00:00 action=reject
```

Frequency scan

Information about RF conditions on available channels can be obtained by running the frequency-scan command.

Command parameters	
Parameter	Description
duration (<i>time interval</i>)	Length of time to perform the scan for before exiting. Useful for non-interactive use. Not set by default.
freeze-frame-interval (<i>time interval</i>)	Time interval at which to update command output. Default: 1s.
frequency (<i>list of frequencies /ranges</i>)	Frequencies to perform the scan on. See channel.frequency parameter syntax above for more detail. Defaults to all supported frequencies.
numbers (<i>string</i>)	Either the name or internal id of the interface to perform the scan with. Required. Not set by default.
rounds (<i>integer</i>)	Number of times to go through list of scannable frequencies before exiting. Useful for non-interactive use. Not set by default.
save-file (<i>string</i>)	Name of file to save output to. Not set by default.

Output parameters	
Parameter	Description
channel (<i>integer</i>)	Frequency (in MHz) of the channel scanned.
networks (<i>integer</i>)	Number of access points detected on the channel.
load (<i>integer</i>)	Percentage of time the channel was busy during the scan.
nf (<i>integer</i>)	Noise floor (in dBm) of the channel.
max-signal (<i>integer</i>)	Maximum signal strength (in dBm) of APs detected in the channel.
min-signal (<i>integer</i>)	Minimum signal strength (in dBm) of APs detected in the channel.
primary (<i>boolean</i>) (P)	Channel is in use as the primary (control) channel by an AP.
secondary (<i>boolean</i>) (S)	Channel is in use as a secondary (extension) channel by an AP.

Scan command

The 'interface wifivave2 scan' command will scan for access points and print out information about any APs it detects.

The scan command takes all the same parameters as the frequency-scan command.

Output parameters	
Parameter	Description
active (<i>boolean</i>) (A)	Signifies that beacons from the AP have been received in the last 30 seconds.
address (<i>MAC</i>)	The MAC address (BSSID) of the AP.
channel (<i>string</i>)	The control channel frequency used by the AP, its supported wireless standards and control/extension channel layout.
security (<i>string</i>)	Authentication methods supported by the AP.
signal (<i>integer</i>)	Signal strength of the AP's beacons (in dBm).
ssid (<i>string</i>)	The extended service set identifier of the AP.
sta-count (<i>integer</i>)	The number of client devices associated with the AP. Only available if the AP includes this information in its beacons.

WPS

WPS server

An AP can be made to accept WPS authentication by a client device for 2 minutes by running the following command.

```
/interface/wifiwave2 wps-push-button wifil
```

WPS client

The wps-client command enables obtaining authentication information from a WPS-enabled AP.

Command parameters	
Parameter	Description
duration (<i>time interval</i>)	Length of time after which the command will time out if no AP is found. Unlimited by default.
interval (<i>time interval</i>)	Time interval at which to update command output. Default: 1s.
mac-address (<i>MAC</i>)	Only attempt connecting to AP with the specified MAC (BSSID). Not set by default.
numbers (<i>string</i>)	Name or internal id of the interface with which to attempt connection. Not set by default.
ssid (<i>string</i>)	Only attempt to connect to APs with the specified SSID. Not set by default.

Radios

Information about the capabilities of each radio can be gained by running the ``/interface/wifiwave2/radio print detail`` command.

Property	Description
2g-channels (<i>list of integers</i>)	Frequencies supported in the 2.4GHz band.
5g-channels (<i>list of integers</i>)	Frequencies supported in the 5GHz band.
bands (<i>list of strings</i>)	Supported frequency bands, wireless standards and channel widths.
ciphers (<i>list of strings</i>)	Supported encryption ciphers.
countries (<i>list of strings</i>)	Regulatory domains supported by the interface.
min-antenna-gain (<i>integer</i>)	Minimum antenna gain permitted for the interface.
phy-id (<i>string</i>)	A unique identifier.
radio-mac (<i>MAC</i>)	MAC address of the radio interface. Can be used to match radios to interface configurations.
rx-chains (<i>list of integers</i>)	IDs for radio chains available for receiving radio signals.
tx-chains (<i>list of integers</i>)	IDs for radio chains available for transmitting radio signals.

Registration table

The registration table contains read-only information about associated wireless devices.

Parameter	Description
authorized (<i>boolean</i>) (A)	True when the peer has successfully authenticated.

bytes (<i>list of integers</i>)	Number of bytes in packets transmitted to a peer and received from it.
interface (<i>string</i>)	Name of the interface, which was used to associate with the peer.
mac-address (<i>MAC</i>)	The MAC address of the peer.
packets (<i>list of integers</i>)	Number of packets transmitted to a peer and received from it.
rx-rate (<i>string</i>)	Bitrate of received transmissions from peer.
signal (<i>integer</i>)	Strength of signal received from the peer (in dBm).
tx-rate (<i>string</i>)	Bitrate used for transmitting to the peer.
uptime (<i>time interval</i>)	Time since association.

De-authentication

Wireless peers can be manually de-authenticated (forcing re-association) by removing them from the registration table.

```
/interface/wifiwave2/registration-table remove [find where mac-address=02:01:02:03:04:05]
```

Regulatory domain information

Information about your regulatory domain, such as allowed frequencies, transmit power and DFS requirements can be found in the **info** menu.

```
/interface/wifiwave2/info country-info Latvia
```