

W60G

- [Summary](#)
- [General interface properties](#)
- [Scan](#)
- [Monitor](#)
- [Align](#)
- [Sniff](#)
- [Point to Multi Point setup example](#)
- [Point to Point GUI configuration example](#)
- [Troubleshooting and Recommendations](#)
 - [Physical Properties](#)
 - [Device RF characteristics](#)
 - [Regions](#)
 - [Connection issues](#)
 - [SNMP OIDs for monitoring](#)
 - [Configuration Reset For Wireless Wire kits](#)

Summary

Packages: `system,wireless`

802.11ad implementation capable of providing Gigabit Ethernet speeds over wireless network.

Extend your Gigabit network over a transparent AES encrypted wireless 60GHz link without usual wired or wireless network problems.

General interface properties

Sub-menu: `/interface w60g`

Warning: Wireless Wire kit devices comes in pre-configured, connected pairs. Manual configuration is optional

Property	Description
arp (<i>disabled enabled proxy-arp reply-only</i> ; Default: enabled)	Read more >>
arp-timeout (<i>auto integer</i> ; Default: auto)	ARP timeout is time how long ARP record is kept in ARP table after no packets are received from IP. Value auto equals to the value of arp-timeout in /ip settings , default is 30s
comment (<i>string</i> ; Default:)	Short description of the interface
disabled (<i>yes no</i> ; Default: yes)	Whether interface is disabled
frequency (<i>58320 60480 62640 64800 66000 auto</i> ; Default: auto)	Frequency used in communication (Only active on bridge device)
isolate-stations (<i>yes no</i> ; Default: yes)	Don't allow communication between connected clients (from RouterOS 6.41)
l2mtu (<i>integer [0..7882]</i> ; Default: 1600)	Layer2 Maximum transmission unit
mac-address (<i>MAC</i> ; Default:)	MAC address of the radio interface
mdmg-fix (<i>yes no</i> ; Default: no)	Experimental feature working only on wAP60Gx3 devices, providing better point to multi point stability in some cases
mode (<i>ap-bridge bridge sniff station-bridge</i> ; Default: bridge)	Operation mode
mtu (<i>integer [32..8192]</i> ; Default: 1500)	Layer3 Maximum transmission unit
name (<i>string</i> ; Default: wlan60-1)	Name of the interface

password (<i>string</i> ; Default: randomly generated)	Password used for AES encryption
put-stations-in-bridge (; Default:)	Put newly created station device interfaces in this bridge
region (<i>asia australia canada china eu japan no-region-set usa</i> ; Default: no-region-set)	Parameter to limit frequency use
scan-list (<i>58320,60480,62640,64800,66000</i> ; Default: 58320,60480,62640,64800)	Scan list to limit connectivity over frequencies in station mode
ssid (<i>string (0..32 chars)</i> ; Default: value of System Identity)	SSID (service set identifier) is a name that identifies wireless network
tx-sector (<i>integer [0..63] auto</i> ; Default: auto)	Disables beamforming and locks to selected radiation pattern

Sub-menu: `/interface w60g print stats`

Provides more detailed information about Beamforming occurrences and some debug information:

```
/interface w60g print stats name: wlan60-1
beamforming-event: 310
tx-io-msdu: 0
tx-sw-msdu: 154 663
tx-fw-msdu: 102
tx-ppdu: 220 147
tx-ppdu-from-q: 40 327
tx-mpdu-new: 154 663
tx-mpdu-total: 184 759
tx-mpdu-retry: 30 096
rx-ppdu: 166 636
rx-mpdu-crc-err: 4 817
rx-mpdu-crc-ok: 285 649
```

Station interface properties

Warning: ap-bridge device requires License level 4 ([click for more information](#)) to support more than one connected client

From RouterOS 6.41 - Point To Multi Point support is added.

There are several important changes and improvements in later versions. Please always upgrade to latest versions!

Connected clients are treated as individual interfaces, after successful connection new station interface is created.

After update default configuration still works - newly created station interface is moved to default bridge.

Sub-menu: `/interface w60g station`

Property	Description
parent (<i>string</i> ; Default: wlan60-*)	Parent interface name
put-in-bridge (<i>none parent bridge-name</i> ; Default: parent)	Add station device interface to specific bridge
remote-address (<i>MAC</i> ; Default: matches bridge interface MAC)	MAC address of bridge interface, station is connecting to

Scan

```
/interface w60g scan wlan60-1
```

Scan command searches for and displays available AP(s) in the frequency range supported by the W60G interface.

Using scan command the interface operation is disabled (wireless link is disconnected during the scan operation)

Currently it is impossible to do background scans.

Monitor

```
/interface w60g monitor wlan60-1
connected: yes frequency: 58320
remote-address: 04:D6:AA:AA:AA:AA
mcs: 8
phy-rate: 2.3Gbps
signal: 80 rssi: -68
tx-sector: 28
tx-sector-info: center
distance: 160.9m
```

Monitor shows current state of active connection. Distance measurement tool provides very precise distance measurements. "tx-sector-info" (feature in testing stage) provides information from currently used beamforming pattern and shows direction to center - theoretical highest power output point.

Align

```
/interface w60g align wlan60-1
connected: yes
frequency: 58320
remote-address: 04:D6:AA:AA:AA:AB
tx-mcs: 6
tx-phy-rate: 1540.0Mbps
signal: 70
rssi: -62
10s-average-rssi: -63.1
tx-sector: 62
tx-sector-info: left 19 degrees, up 26.6 degrees
rx-sector: 96
distance: 220.88m
tx-packet-error-rate: 5%
```

In align mode frames between two devices are exchanged more rapidly and information about signal quality is displayed more often. Use "rssi", "10s-average-rssi" and "tx-sector-info" (available from 6.44beta39) values for more precise link alignment. When devices enter align mode - link is lost for a few seconds.

Sniff

Sniff mode allows to capture nearby 802.11ad frames. To use sniff mode same frequency needs to be used and interface operational mode needs to be set to sniff:

```
/interface w60g set wlan60-1 mode=sniff
```

Now this interface can be used in [Tools/Packet Sniffer](#) for packet capture. Sniffer mode can't be used together with regular interface working modes.

Point to Multi Point setup example

All MikroTik devices can be interconnected. There are three different versions of wAP60G devices currently available:

- Wireless Wire kit
- wAP 60G
- SXTsq60 Lite60
- wAP 60G AP

And

- Wireless Wire Dish

Hardware wise wAP devices are identical, but there are some software limitations -

wAP 60G AP is designed for Access Point usage in PtMP (Point to Multi Point) setups, but can be also used as PtP (Point to Point) or as Station device. It's already equipped with level4 license for more than one connected client support [More about Licenses](#)

Wireless Wire kit, Wireless Wire Dish, SXTsq Lite60 and wAP60G devices comes with level3 license. Wireless wire dish should be only used as Client device due to it's narrow radiation pattern.

License upgrade is needed to unlock more than one simultaneously connected client in Access Point mode, but devices can connect to Access Points as regular Station devices.

Warning: Before configuration, make sure devices are running latest software versions: [How to upgrade](#)

Minimal configuration for transparent wireless link is matching SSID, correct mode (bridge || station-bridge) and Wireless and Ethernet interfaces put in same bridge.

In current example we will look at usage case where **wAP60G AP** is used as Access Point, **wAP60G** and **Wireless Wire kit** devices are used as Station devices, forming 4 unit network.

Warning: It's recommended to change default IP addresses to avoid connection issues to the devices

wAP60G AP units come pre-configured with WISP Bridge [default configuration](#)

SSID and bridge between Wireless and Ethernet interfaces is already configured. It's recommended to set up Wireless password and change SSID. If device has been reset, you can also set correct mode and enable interface.

One liner that does all previously mentioned steps:

```
/interface w60g set wlan60-1 password="put_your_safe_password_here" ssid="put_your_new_ssid_here" disabled=no mode=ap-bridge
```

Wireless Wire and wAP60G units come pre-configured with PTP Bridge default configuration.

Wireless Wire devices have already randomly generated matching SSID and Wireless password.

Bridge device (Bridge or Access point device with one connected client support) needs Wireless mode change to station-bridge.

One liner that can be used to set devices in client mode:

```
/interface w60g set wlan60-1 password="put_your_safe_password_here" ssid="put_your_new_ssid_here" disabled=no mode=station-bridge
```

If configuration is done from empty configuration (reset without default configuration) -

new bridge needs to be created containing Wireless and Ethernet interfaces and IP address for easy access should be added.

```
{ /interface bridge
add name=bridge1
/interface bridge port
add bridge=bridge1 interface=ether1
add bridge=bridge1 interface=wlan60-1
/ip address add address=192.168.88.1/24 interface=bridge1
}
```

For Access Point add this line to ensure all connected stations will be put in same bridge.

```
/interface w60g set wlan60-1 put-stations-in-bridge=bridge1
```

After successful connection for each Client device new entry will appear on Access Point device under:

```
/interface w60g station print
```

Flags: X - disabled, R - running

```
0 name="wlan60-station-1" parent=wlan60-1 remote-address=AA:AA:AA:AA:AA:AA mtu=1500 mac-address=AA:AA:AA:AA:AA:AB arp=enabled arp-timeout=auto put-in-bridge=parent

0 name="wlan60-station-2" parent=wlan60-1 remote-address=AA:AA:AA:AA:AB:AA mtu=1500 mac-address=AA:AA:AA:AA:AA:AC arp=enabled arp-timeout=auto put-in-bridge=parent

0 name="wlan60-station-3" parent=wlan60-1 remote-address=AA:AA:AA:AA:AC:AA mtu=1500 mac-address=AA:AA:AA:AA:AA:AD arp=enabled arp-timeout=auto put-in-bridge=parent

0 name="wlan60-station-4" parent=wlan60-1 remote-address=AA:AA:AA:AA:AD:AA mtu=1500 mac-address=AA:AA:AA:AA:AA:AE arp=enabled arp-timeout=auto put-in-bridge=parent
```

For each client separate settings can be applied (queues, VLANs, Firewall rules, etc) providing more flexibility in configuration.

To limit client-client communication in same bridge isolate-stations option can be used on Access Point device:

```
/interface w60g set wlan60-1 isolate-stations=yes
```

Point to Point GUI configuration example

[Point to Point GUI configuration example](#)

Troubleshooting and Recommendations

MikroTik 60GHz solutions functionality includes support for for ATPC (Adaptive Transmit Power Control)

Physical Properties

Atmospheric attenuation for the wireless frequencies used in 802.11ad standard is very high, this should be taken in account before deploying links.

The Wireless Wire kit have been tested in distances up to 200 meters.

Wireless Wire dish kit is tested at distances up to 2500 meters For stability and full speed availability this kit is recommended for distances up to 1500 meters.

wAP60G devices are equipped with phase array 60° beamforming antennas, that can help signal find the way around objects in short distances but it's still vital to keep the line of sight clear on higher distances.

LHG60G device single radiation pattern is less than 1 degree (both Horizontal and Vertical), All patterns combined provide close to 3 degree coverage in both Horizontal and Vertical planes, best one for each situation is calculated by using beamforming algorithm. Beam width and direction depends on used predefined calibrated sector.

Device RF characteristics

60 GHz devices

Device	Width of single antenna pattern and full span in degrees	EIRP	Tx-power	Center sectors*
wAP 60G	15-20 degrees single pattern and full span 60 degrees over horizontal and 30 degrees vertical plane	< 40 dBm		27,28,35,36
wAP 60G AP	15-20 degrees single pattern and full span 60 degrees over horizontal and 30 degrees vertical plane	< 40 dBm		27,28,35,36
Wireless Wire	15-20 degrees single pattern and full span 60 degrees over horizontal and 30 degrees vertical plane	< 40 dBm		27,28,35,36
wAP 60Gx3 AP	15-20 degrees single pattern and full span 180 degrees over horizontal and 30 degrees vertical plane	< 40 dBm		27,28,35,36
SXTsq Lite 60	15-20 degrees single pattern and full span 60 degrees over horizontal and 30 degrees vertical plane	< 40 dBm		27,28,35,36

Cube Lite 60	4-8 degrees single pattern and full span 12 degrees over horizontal and 12 degrees vertical plane	< 40 dBm	< 10 dBm	27,28,35,36
Cube 60G ac	4-8 degrees single pattern and full span 12 degrees over horizontal and 12 degrees vertical plane	< 40 dBm	< 10 dBm	27,28,35,36
Cube 60Pro ac	4-8 degrees single pattern and full span 11 degrees over horizontal and 11 degrees vertical plane	< 40 dBm	< 10 dBm	27,28,35,36
CubeSA 60Pro ac	15 degrees single pattern and full span 60 degrees over horizontal and 30 degrees vertical plane	< 40 dBm	< 10 dBm	27,28,35,36
LHG Lite 60	< 1 degree single pattern and full span 3 degrees over horizontal and 3 degrees vertical plane	< 55 dBm	< 10 dBm	27,28,35,36
LHG 60G	< 1 degree single pattern and full span 3 degrees over horizontal and 3 degrees vertical plane	< 55 dBm	< 10 dBm	27,28,35,36
Wireless Wire Dish	< 1 degree single pattern and full span 3 degrees over horizontal and 3 degrees vertical plane	< 55 dBm	< 10 dBm	27,28,35,36
Wireless Wire nRAY	< 1 degree single pattern and full span 3 degrees over horizontal and 3 degrees vertical plane	< 55 dBm or <40 dBm with EU region	< 10 dBm	31

***center sector is calibrated center of beamforming array**

Regions

MikroTik 802.11ad devices support frequency range: 57240 MHz - 67080 MHz, frequency and channel use can be limited if "region" parameter is used.

Region	lower frequency	upper frequency	usable channels
USA	57.24 GHz	70.20 GHz	1, 2, 3, 4, 5, 6
Canada	57.24 GHz	63.72 GHz	1, 2, 3
Asia	57.24 GHz	63.72 GHz	1, 2, 3
EU	57.24 GHz	65.88 GHz	1, 2, 3, 4
Japan	57.24 GHz	65.88 GHz	1, 2, 3, 4
Australia	57.24 GHz	65.88 GHz	1, 2, 3, 4
China	59.40 GHz	63.72 GHz	2, 3

Connection issues

In order to connect devices they need to be in direct visibility, "scan-list" on client device needs to include "frequency" used on AP device. LHG60 devices require very precise alignment in order to get best performance in higher distances.

SNMP OIDs for monitoring

From RouterOS>=6.42rc6 SNMP support for W60G interface monitoring is added

```

For main interfaces:
1.3.6.1.4.1.14988.1.1.1.8.1.2.1 integer Mode
1.3.6.1.4.1.14988.1.1.1.8.1.3.1 string SSID
1.3.6.1.4.1.14988.1.1.1.8.1.4.1 integer Connected status
1.3.6.1.4.1.14988.1.1.1.8.1.5.1 string Remote MAC
1.3.6.1.4.1.14988.1.1.1.8.1.6.1 integer Frequency
1.3.6.1.4.1.14988.1.1.1.8.1.7.1 integer MCS
1.3.6.1.4.1.14988.1.1.1.8.1.8.1 integer Signal quality
1.3.6.1.4.1.14988.1.1.1.8.1.9.1 integer tx-sector
1.3.6.1.4.1.14988.1.1.1.8.1.11.1 string Sector info
1.3.6.1.4.1.14988.1.1.1.8.1.12.1 integer RSSI
1.3.6.1.4.1.14988.1.1.1.8.1.13.1 gauge32 PHY rate

```

station interfaces will be numbered under different table:

```
1.3.6.1.4.1.14988.1.1.1.9.1.2.(interfaceID) = integer Connected status
1.3.6.1.4.1.14988.1.1.1.9.1.3.(interfaceID) = Hex-STRING mac-address
1.3.6.1.4.1.14988.1.1.1.9.1.4.(interfaceID) = INTEGER: MCS
1.3.6.1.4.1.14988.1.1.1.9.1.5.(interfaceID) = INTEGER: Signal Quality Index
1.3.6.1.4.1.14988.1.1.1.9.1.6.(interfaceID) = INTEGER: tx-sector
1.3.6.1.4.1.14988.1.1.1.9.1.8.(interfaceID) = Gauge32: data-rate [Mbps]
1.3.6.1.4.1.14988.1.1.1.9.1.9.(interfaceID) = INTEGER: RSSI
1.3.6.1.4.1.14988.1.1.1.9.1.10.(interfaceID) = INTEGER: distance [cm]
```

InterfaceID is added from 3 and increases by +1 for each connected station. More information about SNMP functionality and MIB files can be found in [SNMP manual](#)

Configuration Reset For Wireless Wire kits

Reset button has same functionality as on other devices, explained in detail [here](#)

5 second button hold on startup (USR LED light starts flashing) - resets to password protected state.

10 second button hold on startup (USR LED turns solid after flashing) - completely removes configuration.

Warning: After complete removal of configuration, only [mac-telnet](#) connection may be established