

Reboot loop

Problem

The device reboots continuously.

Follow these steps to load the backup bootloader:

1. Press and hold the reset button;
2. Plug the device into the power source;
3. You need to hold reset button just for 1-2 seconds and the backup bootloader will be loaded;
4. When the device has loaded open the CLI and execute the command to upgrade your bootloader `"/system routerboard upgrade"`

Related articles

- [Problems with Netinstall?](#)
- [Reboot loop](#)